

iG8: Turning Off Automatic Observation File Recording

Date: 29 March 2018

By: Mark Silver, ms@igage.com

1. Login to the head via Wi-Fi. Go to the 'Data Recording, Log Settings' configuration:

The screenshot shows the iGage web interface for 'Log Settings'. On the left, there is a sidebar with 'Data Recording' selected, containing options for Log Settings, FTP Push Settings, and Data Download. The main content area shows 'Storage Info' with two rows: Internal Storage (29720MB) and External Storage (0MB). Below this is an attention warning: 'Attention: Total assigned storage size of 8 threads should be less than 27GB. It will stop recording when the storage is full.' The 'Record Info' table has 8 rows, each with a recording number, file name (e.g., record1), activated status, log status, setting parameter, and a switch (ON/OFF). A 'Clear All' button is visible in the top right of the table area.

1

2. Click on OFF to turn off the current file:


Log Status	Setting Parameter	Switch
Recording	Modify/Detail	ON/OFF
Not Recording	Modify/Detail	ON/OFF

Confirm with 'Yes', receiver will beep, recording will stop (assuming it was on.)

3. Click on the 'Modify' link:


Log Status	Setting Parameter
Not Recording	Modify/Detail
Not Recording	Modify/Detail
Not Recording	Modify/Detail

4. Select 'Auto Record' = 'NO':

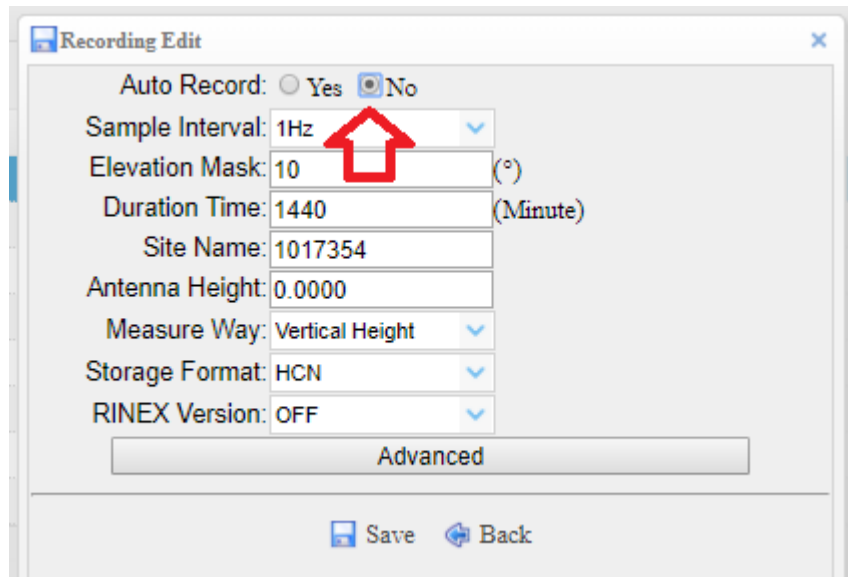

2

5. Click on 'Save':

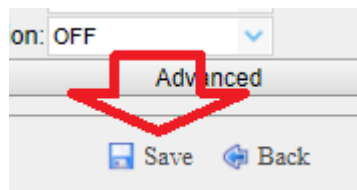

The receiver will no longer automatically open an observation file.